


RE 40XCP/GP
MonoblocBasin Mixer.

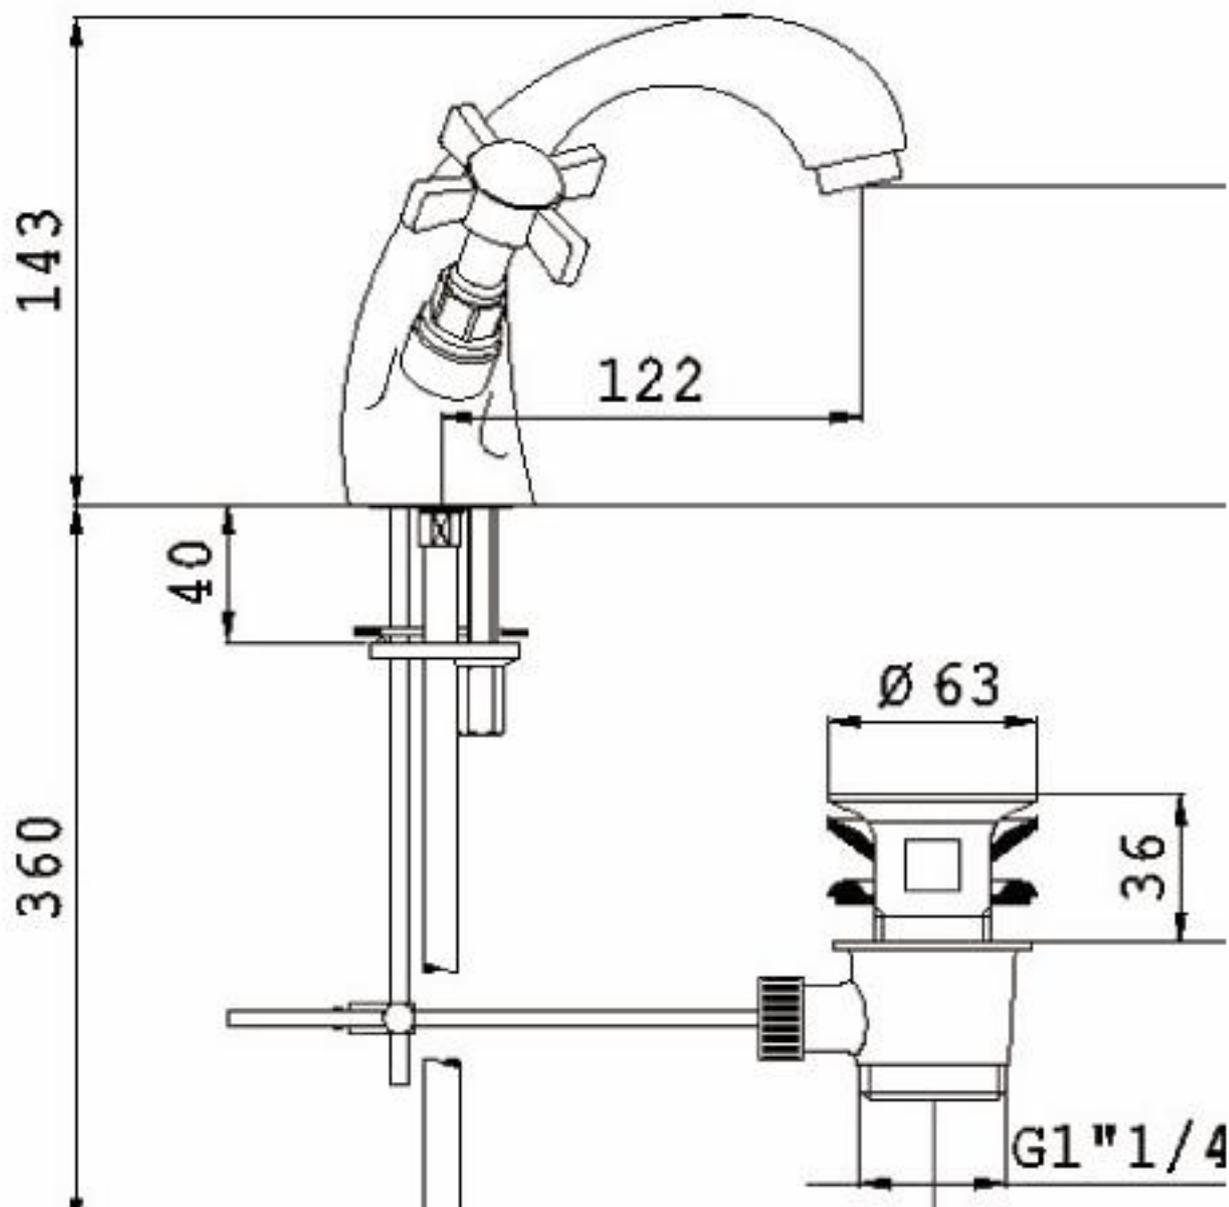

INSTALLATION INSTRUCTIONS

Firstly ensure that the bidet that you intend to attach the Renaissance monobloc bidet mixer to has a hole that will allow the two copper tails supplied to fit through.

Place the monobloc mixer on-top of the bidet, proceed to screw the brass retaining screw into the underside of the monobloc mixer from the underside of the bidet, then fix the horse shoe rubber and the horse shoe brass clip so that the monobloc mixer is secured tightly to the bidet. Once the mixer is secure proceed to screw the copper tails into the monobloc mixer. Attach the hot and cold copper tail to the water supply with your preferred method of plumbing. Renaissance recommends welding as a secure method of attaching the copper tails supplied to the hot and cold water supply.

Pop Up Waste

The waste provided is a 32 mm pop up waste, if your vanity does not accommodate a 32 mm waste disregard this part of your product - your product will still work correctly when installed with another waste.

When installing the pop up waste place the rod in the hole at the back of the hub attach this underneath the basin to the small square adaptor, also attach the rod with a nut attached to the square adaptor, the knut is attached to the waste. Once connected the pushing of the rod will pop the plug out of the waste and pulling the rod will secure the plug within the waste.

For further assistance with your Renaissance product please call the technical support line on (07) 3266 5222.