


RE 60X CP/GP **Basin Deck Mounted 3 Hole Set**

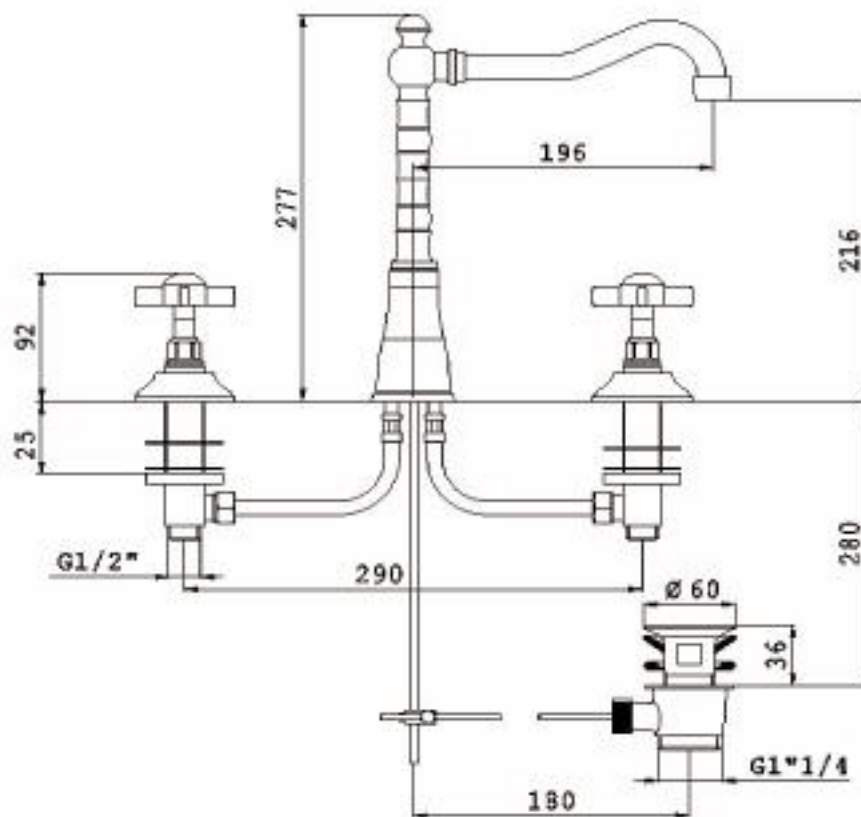

INSTALLATION INSTRUCTIONS

Before starting the installation process you must first check that your basin has a centre hole of 30mm diameter or greater, this is the width needed to allow the flexible hoses to fit through the vanity.

Attach the brass bolt and washers to the top of the cartridge's (the top is the end that has the spline). From the underside of the basin push the cartridge with the spline at the top through the relevant hole in your basin. When the cartridge head is pushed through push the bell of the tap onto the spline and screw the bell down so that it sits firmly on the basin. Once the bell is screwed down screw the knut on the underside of the cartridge up so that the cartridge is firmly secured.

Take the brass hub and retaining rod and screw the retaining rod into the brass hub, place the brass hub that the spout sits within over the centre hole on the basin, making sure the retaining rod goes through the hole.

From the underside of the basin attach the horse clip retainer and washer onto the retaining rod and secure in place with the retaining bolt. Once the hub is secure screw the flexible hose connectors into the hub from the underside of the vanity. Once connected to the base hub screw, connect the flexible hose to the relevant tap cartridge.

Connect the cartridge to the hot and cold water supply in line with standard approved plumbing practices. Renaissance suggests attaching a nut and olive compression fitting to the tap tail and securely inserting the tubing inside the fitting and tightening the nut and olive so that it is secure and water tight.

Pop Up Waste

The waste provided is a 32 mm pop up waste, if your vanity does not accommodate a 32 mm waste disregard this part of your product - your product will still work correctly when installed with another waste. When installing the pop up waste place the rod in the hole at the back of the hub attach this underneath the basin to the small square adaptor, also attach the rod with a nut attached to the square adaptor, the knut is attached to the waste. Once connected the pushing of the rod will pop the plug out of the waste and pulling the rod will secure the plug within the waste.

For further assistance with your Renaissance product please call the technical support line on (07) 3266 5222.